


Installation Guidelines

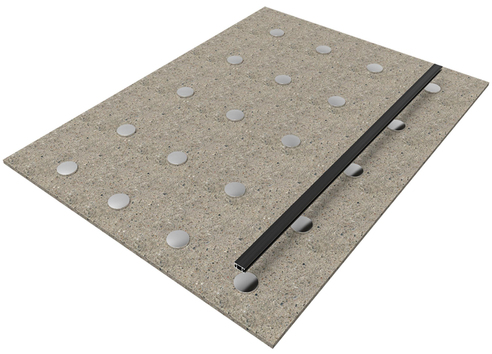



① Install the joist to pedastal with screw.

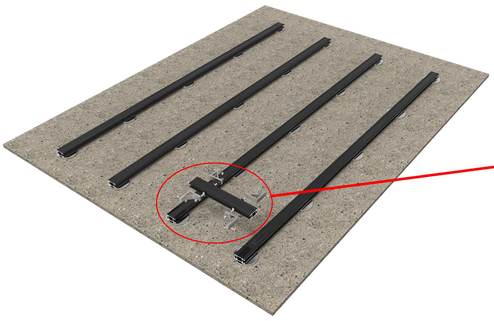

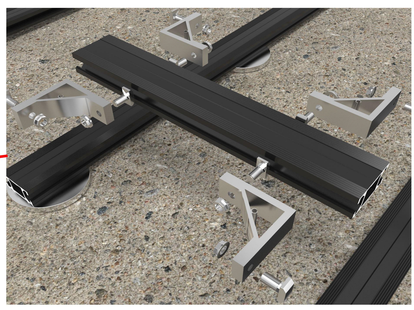



②Connect the crossed joist with bracket.

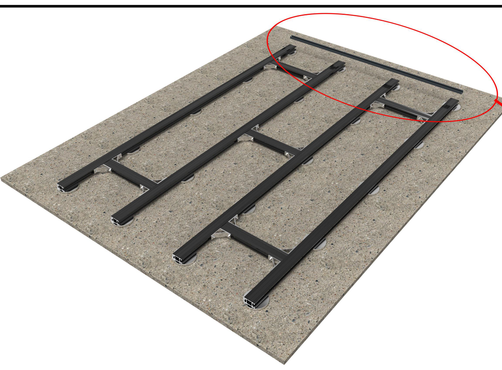

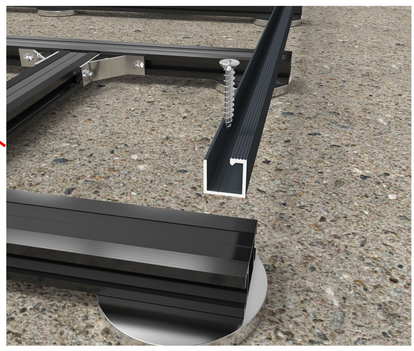


③ Install the started trim with screw.

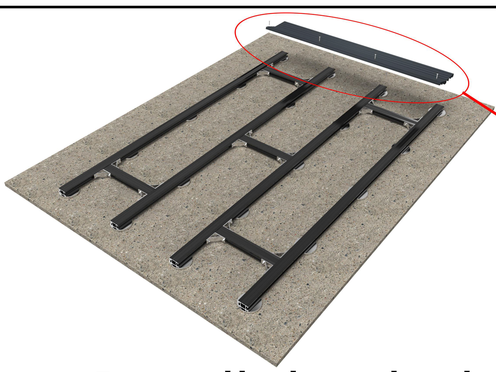


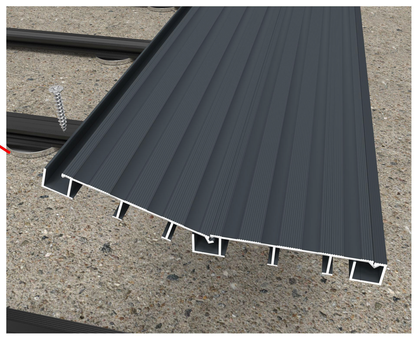

④ Install the deck board piece to the joist one by one with screw.

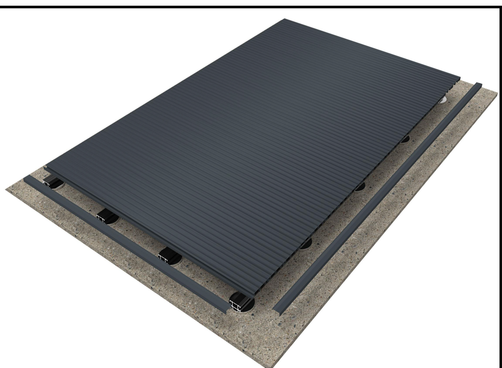

⑤ Install the the edging piece.

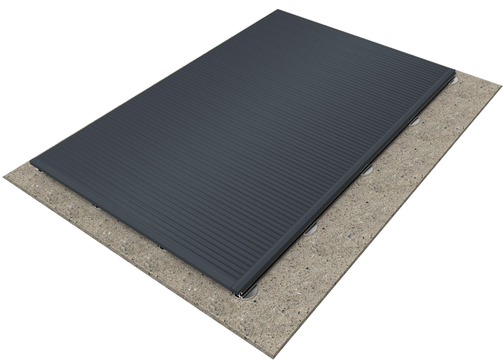

⑥Finish.